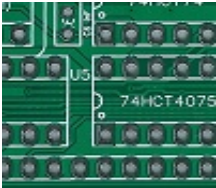 
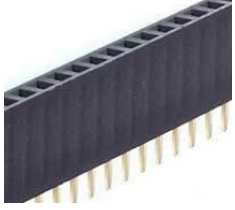 



Contains small parts. Not suitable for young children. Designed for hobby use. Not suitable for commercial, industrial or safety-critical use.

SC147 v1.0.x Printed circuit board  1	C1 to C7 Capacitor 100 nF  7	P1 Header pins 1 row x 40 pin angled  1 Type B profile	S1 to S6 Socket 1 row x 40 pin straight  6	S7 Header socket 1 row x 40 pin angled  1	Spacer Nylon, 10mm, M3  6	Screw (for spacer) M3, 6mm, pan head  6
---	--	--	--	---	---	---

P1 Alternative part
2 row x 40 pin angled

1
See note 1

 Notes
1/ Remove all pins from the second row by pulling them out with a pair of pliers. Hold the plastic near to the pin being removed to avoid breaking the plastic. This leaves a single row of header pins with the correct profile to line up with the horizontal socket of a 40-pin backplane and the double row plastic as a guide when fitting to an 80-pin backplane.

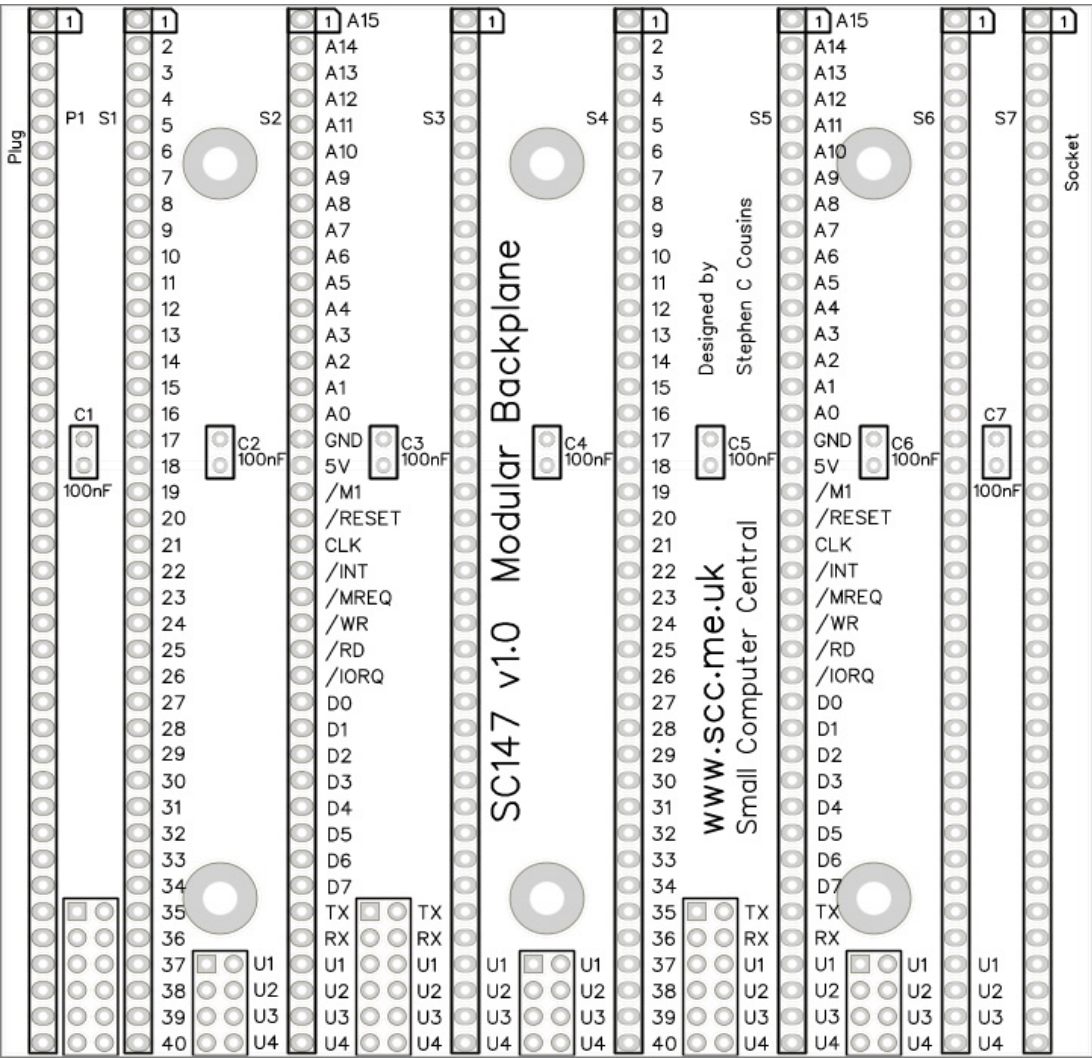

Welcome to your SC147, Backplane Kit

Assembly instructions, user guide, and other documentation can be found at www.scc.me.uk (small computer central)

Release date: 2022-05-07

TITLE: SC147 - Kit Contents		REV: 1.0.1
Designed for RCBus 40 pin	Company: www.scc.me.uk	Sheet: 1/1
Date: 2024-11-21		Drawn By: sccousins